



SMCHP I D-USB
EZ-Connect™ 14Mbps
Powerline to USB Adapter

USER GUIDE

Copyright

Information furnished by SMC Networks, Inc. (SMC) is believed to be accurate and reliable. However, no responsibility is assumed by SMC for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of SMC. SMC reserves the right to change specifications at any time without notice.

Copyright © 2004 by
SMC Networks, Inc.
38 Tesla
Irvine, CA 92618

All rights reserved.

Trademarks:

SMC is a registered trademark; and EZ Connect is a trademark of SMC Networks, Inc. Other product and company names are trademarks or registered trademarks of their respective holders.

TABLE OF CONTENTS

CHAPTER 1 | Introduction

- Features and Benefits
- Package Contents
- Minimum Requirements

CHAPTER 2 | Getting to Know the Powerline Adapter

- LED Indicators
- Resetting the Powerline Adapter

CHAPTER 3 | Getting Connected

- Basic Installation Procedure
- Installing the USB Drivers

CHAPTER 4 | Installing EZ Configuration Utility

- Windows 98SE/Me/2000/XP
- Macintosh Computer

CHAPTER 5 | Using the EZ Configuration Utility

- Launch the Utility
- Utility Layout

CHAPTER 6 | Understanding the Information in the SMC EZ Configuration Utility

- Device List
- Rename Devices
- Delete Devices

CHAPTER 7 | Add a Powerline Device

CHAPTER 8 | Setting a Network Password

CHAPTER 9 | Running the Diagnostic Wizard

CHAPTER 10 | Understand the Diagnostic Report

APPENDIX A | Technical Specifications

APPENDIX B | Compliances

APPENDIX C | Technical Support

CHAPTER 1 | Introduction

Congratulations on your purchase of an EZ Connect™ Powerline to USB Desktop Adapter (SMCHP1D-USB). SMC is proud to provide you with a powerful yet simple communication device for creating a Powerline network that to extend the range of your wired or wireless network.

Features and Benefits

- **EZ Configuration Utility** - Works on both Windows and Mac based PCs
- Plug and Play installation - works out of the box
- Extends the range of your wired or wireless network
- Save time and money by using existing home wiring - no need to run expensive CAT-5 cabling
- Ideal solution for connecting your Game Console system to the Internet to play online games

Package Contents

Before installing the EZ Connect™ Powerline to USB Desktop Adapter, verify that you have the items listed under “Package Contents.” Also be sure that you have the necessary cabling. If any of the items are missing or damaged, contact your local SMC distributor.

- EZ Connect™ Powerline to USB Desktop Adapter
- Powerline Cord
- One USB cable
- CD with User Guide and EZ Configuration Utility
- Quick Installation Guide

If possible, retain the carton and original packing materials in case there is a need to return the product.

Minimum Requirements

- A Windows 98SE/Me/2000/XP PC with USB port
- CD-ROM*

Note: A CD-ROM drive is only required if you want to install the EZ Configuration Utility from EZ Install CD. This utility can also be downloaded from www.smc.com

CHAPTER 2 | Getting to Know the Powerline Adapter

The SMCHP1D-ETH EZ Connect Powerline to USB Desktop Adapter is the perfect solution for the home/office environment. This Powerline Adapter offers:

- 1 - USB 1.1 Connection (LAN)
- 1 - Powerline Connector
- LEDs for network status and troubleshooting

Note: You will need at least two SMC Powerline devices to create a Powerline network.



LED Indicators

The Barricade includes LED indicators on the front panel that simplify installation and network troubleshooting.

LED	Label	Color	Activity
Power	PWR*	Green	Solid LED indicates that the unit is powered on No LED light indicates the unit is powered off
HomePlug	HP	Green	Solid LED indicates that a Powerline signal is detected Blinking LED indicates traffic is being transmitted No LED light indicates no Powerline signal is not detected

The USB Powerline Adapter receives power from the USB port on your PC - so the PWR LED will come on when you connect this Adapter to the USB port - not when you connect it to the power outlet in the wall. The power cord that is connected to the power outlet is simply to link that PC to the Powerline network.

Resetting the Powerline Adapter

To reset the SMC EZ Connect Powerline Adapter you will need to use the EZ Configuration Utility to reset the password to the default setting of [HomePlug].

CHAPTER 3 | Getting Connected

The EZ Connect Powerline to USB Adapter is connected between the USB port on your Windows-based PC and the Powerline Network. The Powerline network is automatically created once you plug in the first Powerline Device.



Basic Installation Procedure


1. **CONNECT the LAN**
Connect an USB cable from your PC to the Powerline to USB Adapters USB 1.1 port on the back on the device.
2. **CONNECT the Powerline**
Run the included Power cord from the Powerline connector on the Adapter to an available power outlet in your home.

Note: For best performance, connect device directly to wall outlet. Do not connect to surge protector power bar.

Installing USB Driver

To install the USB drivers for the SMC EZ Connect Powerline to USB Adapter follow the steps outlined below.

1. Put the EZ Install CD into your CD-ROM drive. The wizard will auto-run.
2. Click on the [Install USB Drivers] option
3. When the USB drivers are installed, you will be prompted to connect your SMCHP1D-USB adapter to your PC and then reboot your PC.

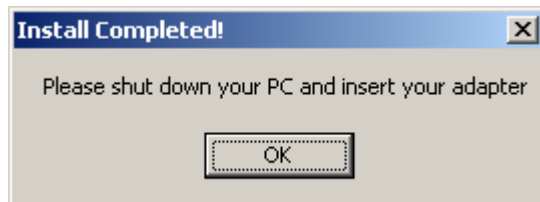

Click [OK] and then close all your open applications and manually reboot your PC.

4. When your computer boots back up, the New Hardware wizard should launch and guide you through the installation of the USB Adapter. During the Driver Installation if you are prompted with following window:



Click the [Continue Anyway] button to complete the installation.

Note: If the wizard is unable to locate the USB drivers you can manually install the drivers by browsing to the Drivers folder on the CD-ROM.

When you have finished installing the USB to Powerline Adapter, if this is the PC you are going to manage your Powerline network from, then install the EZ Configuration Utility - steps are outlined below.

CHAPTER 4 | Installing EZ Configuration Utility

Windows 98SE/Me/2000/XP

The screen shots were taken on a Windows 2000 machines, but the same steps apply will apply for Windows 98SE, Me, and XP.

To access the User Guide and install the EZ Configuration Utility just insert the CD into your CD-ROM drive and the Auto-run splash screen will appear:




Note: If the CD does not Auto-Run you can click on your CD-ROM drive and double mouse-click on the [SMCHP1D-USB.exe] icon to launch this splash screen.


The USB Drivers are not compatible with the Mac OS. However, if you want to manage your Powerline Adapter from a Mac you can use the SMC EZ Configuration Utility. The EZ Configuration Utility for those operating systems are located on the CD-ROM in there respective folders: OSX and OS9.

To install the utility, follow the steps below:


1. Click on the [Install EZ Configuration Utility] option on the splash screen (shown above)
2. On the SMC Logo screen, click the [Next] button to start.
3. Click the [Next] button again.

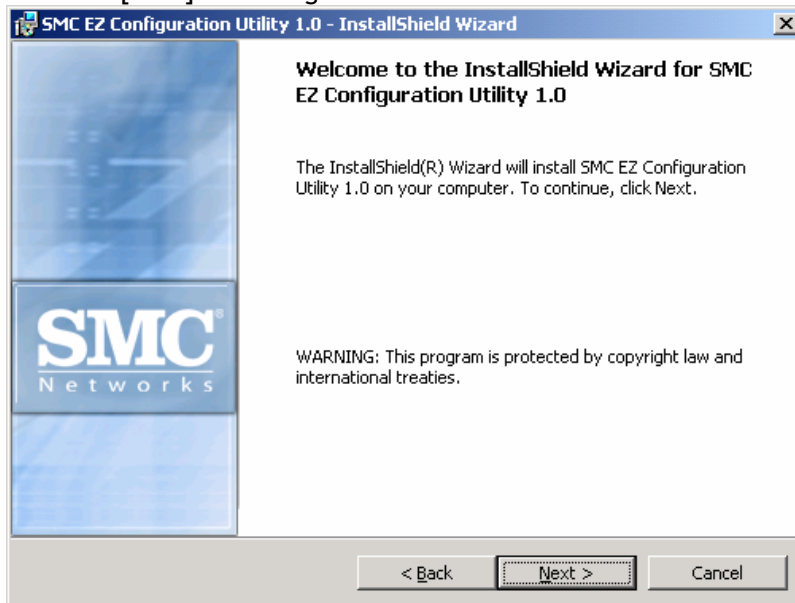

4. Accept the License Agreement, and click the [Next] button to continue.

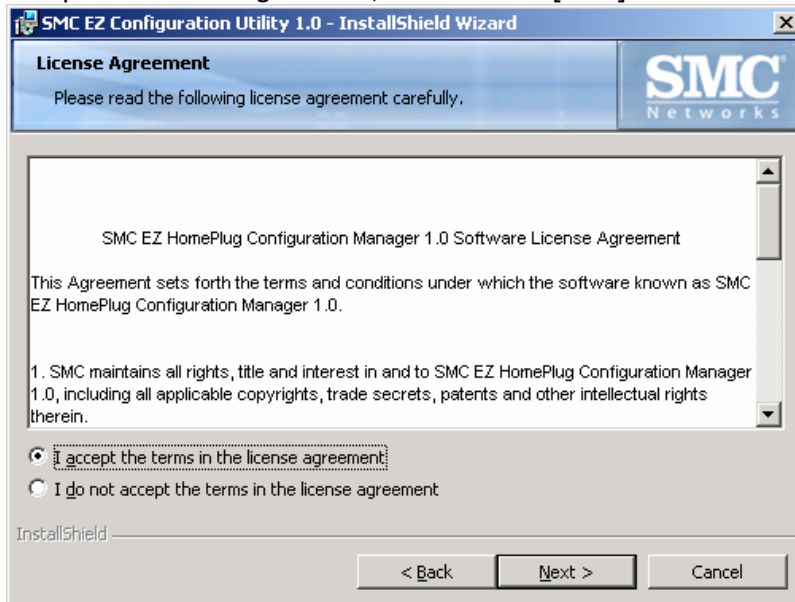


5. Enter in the Username and Organization information and set access rights, then click the [Next] button to continue.
6. Confirm the installation location, and then click the [Next] button to continue. Default install location is: C:/Program Files/SMC.

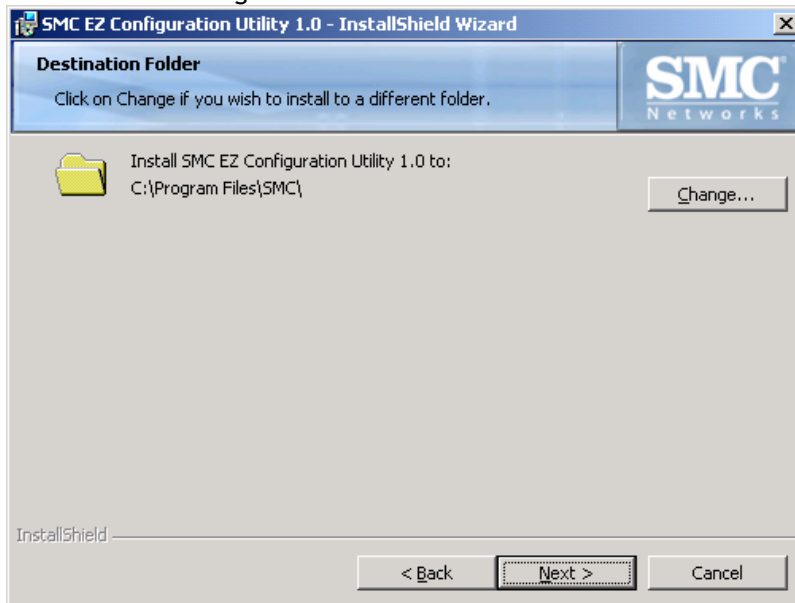


Note: You can change the installation location by clicking the [Change...] button.

7. Confirm the Installation information. Then click the [Install] button to begin the process.
8. To complete the Installation click the [Finish] button.

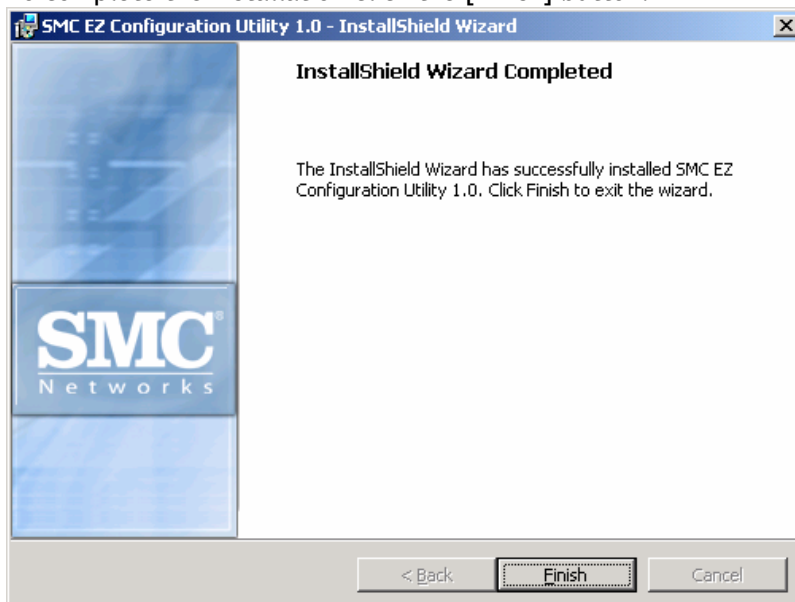

9. When finished, you must restart your computer to finalize the installation. Click the [Yes] button to reboot your PC.

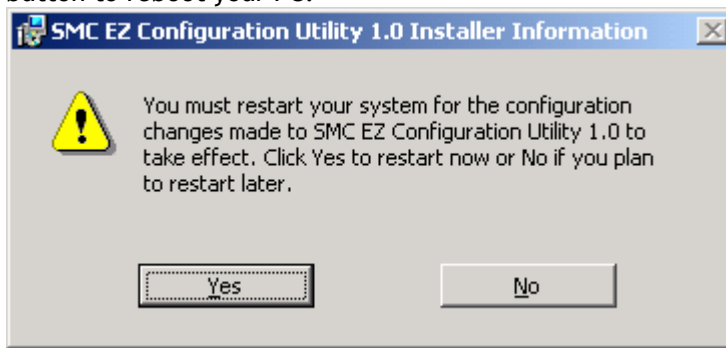

When your computer finishes restarting, the installation is complete and you can now use this utility to configure your Powerline network.

CHAPTER 5 | Using the EZ Configuration Utility


To access the EZ Configuration Utility, follow the steps below:

1. Click on the [Start] button
2. Choose [Programs]
3. Select the [SMC EZ HomePlug Configuration Manager 1.0] folder, and then click on the [SMC EZ HomePlug Configuration Manager 1.0] icon.



Note: Before you run this utility please make sure that you have a SMC Powerline device connected directly to the PC.

The SMC EZ Configuration Utility window is shown below. With this utility you can configure and manage all of your SMC Powerline devices.

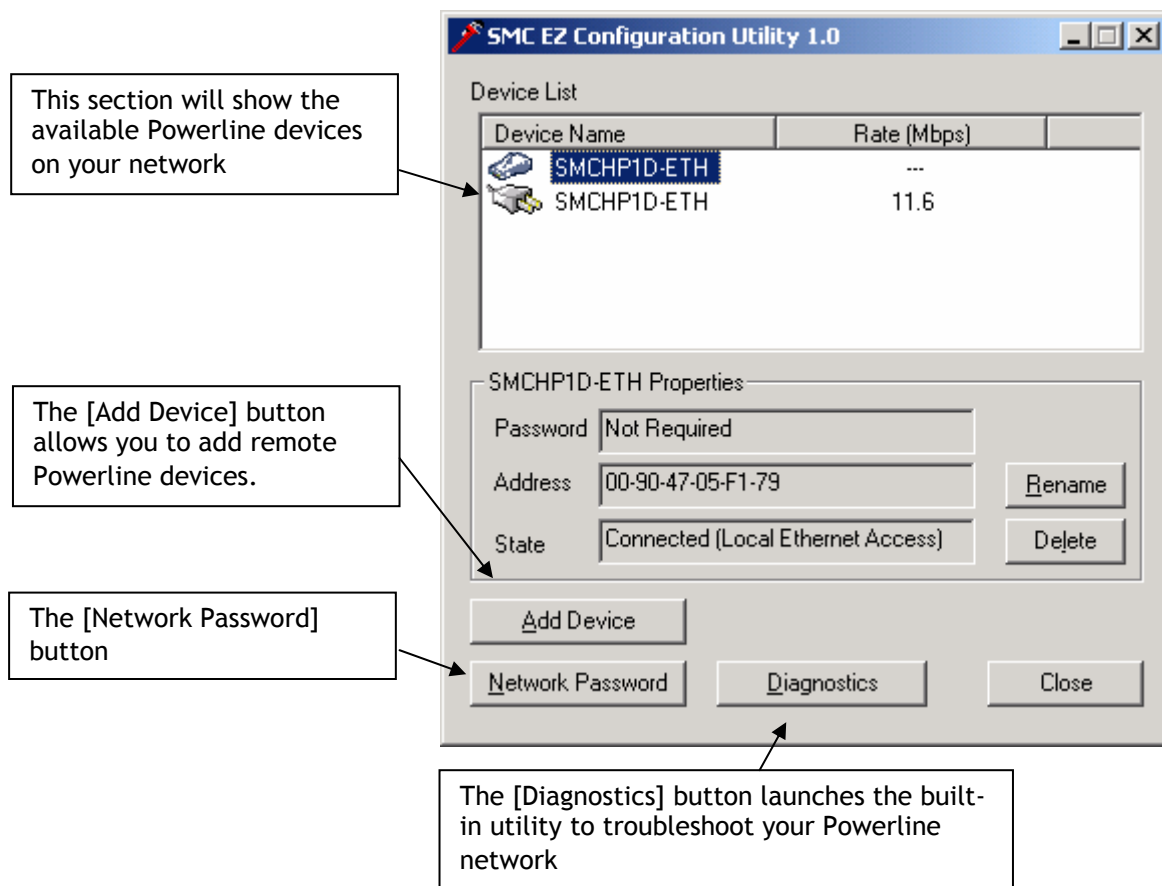The image shows the SMC EZ Configuration Utility 1.0 window with several annotations. The window has a title bar with the text "SMC EZ Configuration Utility 1.0". Inside, there is a "Device List" section with a table. The table has two columns: "Device Name" and "Rate (Mbps)". The first row shows "SMCHP1D-ETH" with a rate of "...". The second row shows "SMCHP1D-ETH" with a rate of "11.6". Below the table is the "SMCHP1D-ETH Properties" section. It contains fields for "Password" (set to "Not Required"), "Address" (set to "00-90-47-05-F1-79"), and "State" (set to "Connected (Local Ethernet Access)"). There are also "Rename" and "Delete" buttons. At the bottom of the window are four buttons: "Add Device", "Network Password", "Diagnostics", and "Close". Annotations with arrows point to these buttons and the device list. The "Add Device" button is annotated with "The [Add Device] button allows you to add remote Powerline devices." The "Network Password" button is annotated with "The [Network Password] button". The "Diagnostics" button is annotated with "The [Diagnostics] button launches the built-in utility to troubleshoot your Powerline network". The "Device List" section is annotated with "This section will show the available Powerline devices on your network".

Device Name	Rate (Mbps)
SMCHP1D-ETH	---
SMCHP1D-ETH	11.6

SMCHP1D-ETH Properties

Password: Not Required

Address: 00-90-47-05-F1-79

State: Connected (Local Ethernet Access)

Buttons: Add Device, Network Password, Diagnostics, Close

Annotations:

- This section will show the available Powerline devices on your network
- The [Add Device] button allows you to add remote Powerline devices.
- The [Network Password] button
- The [Diagnostics] button launches the built-in utility to troubleshoot your Powerline network

CHAPTER 6 | Understanding the Information in the SMC EZ Configuration Utility


When you launch the EZ Configuration utility it will automatically scan your Powerline network for all the available Powerline adapters. If a new Powerline device is added to your network it will automatically show up in the utility.

Device List


The Powerline adapters are displayed in the [Device List] window. The default device name is the Model number of the Powerline adapter.

There will be two types of devices displayed in your device list:

Local Device	This is the Powerline device that is connected to the PC that you are using or if you are connect to a router and the Powerline device is connected to. The local device will not have a Rate associated to it or require you to enter a device password to change the Network Password.
Remote Device	These are Powerline adapters that are connected to other devices in your house, such as a PC. These devices will show you the Rate they are linked up at. If you wish to change the Network Password on these units, then you will have to enter the Device Password.

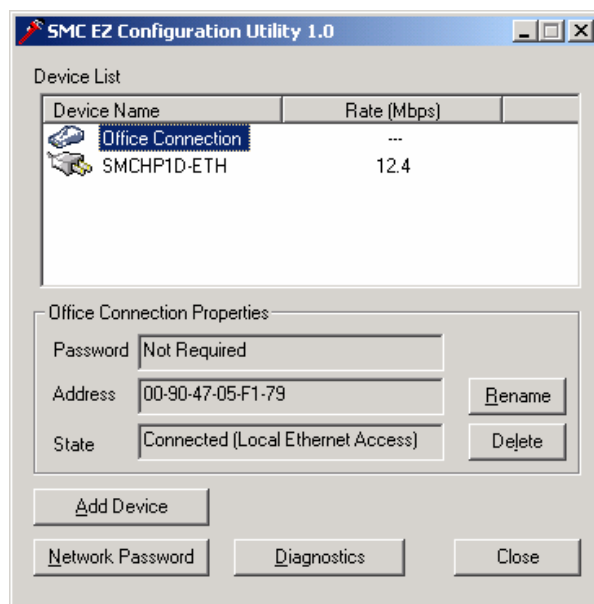

Local Device

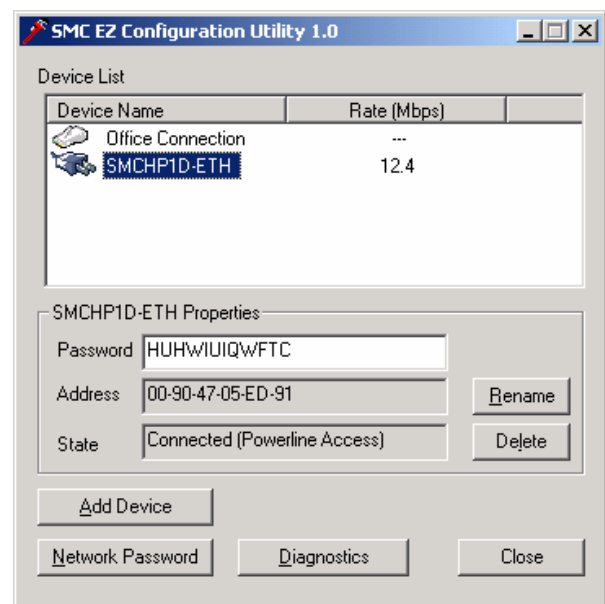

Remote Device

Device Names

The SMC EZ Configuration Utility allows you to change the name of your Powerline devices to make them easier to manage. For example, if you have 4 Powerline adapters in your house, you can give them a name that represents their locations.

To change the Device Name, highlight the Powerline adapter in your Device list and click on the [Rename] button or right mouse-click on the Device icon and select [Rename]

Delete Devices


You can also delete devices from the EZ Configuration Utility. To do this, simply highlight the Powerline adapter in your Device List and click on the [Delete] button or right mouse-click on the Device icon and select [Delete]

For more information on the other EZ Configuration Utility features, see the sections outlined below.

CHAPTER 7 | Add a Powerline Device

The [Add Device] button is used to add a Powerline device to the EZ Configuration Utility before you connect the hardware to your network.

When you click the [Add Device] button, the dialog box below will be displayed:

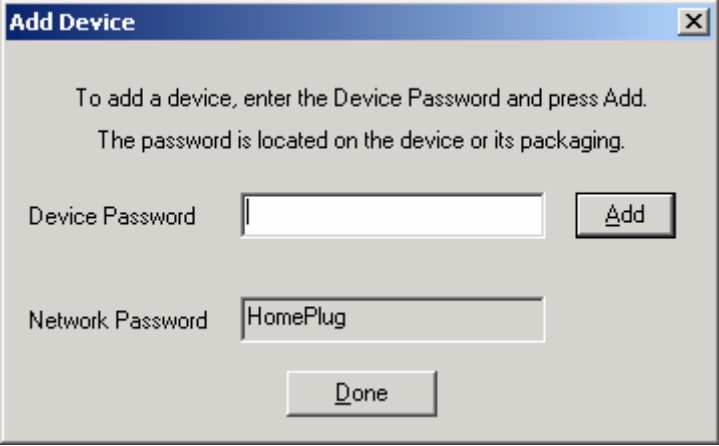A screenshot of a Windows-style dialog box titled "Add Device". The dialog box has a blue title bar with a close button (X) in the top right corner. The main area is light gray and contains the following text: "To add a device, enter the Device Password and press Add." followed by "The password is located on the device or its packaging." Below this, there are two input fields. The first is labeled "Device Password" and is empty. To its right is an "Add" button. The second input field is labeled "Network Password" and contains the text "HomePlug". Below these fields is a "Done" button.

To add a Powerline device to your network, you will need to enter in the Device Password. The Device password is listed on the label on the back of your Powerline device. On the SMCHP1D-ETH and SMCHP1D-USB the Device Password is listed as [DEK: XXXXXXXXXXXX].

Note: DEK stands for “Device Encryption Key”

Once you have added the Powerline hardware to the EZ Configuration Utility, then you can connect the actual unit in the remote location where it is needed to extend your network connection over the Powerline network.

By using this feature you can easily setup a Powerline network with the EZ Configuration Utility and setup and manage the network very efficiently.


CHAPTER 8 | Setting a Network Password

When you click the [Network Password] button the Network Password wizard will launch. This wizard is used to change the Security Key for all the devices configured with the EZ Configuration Manager. Before then remote Powerline device's security/network password can be changed with this wizard, the Device Password must be configured in the utility.

1. Click the [Next] button to start the wizard.




2. Set the Network Password that you want to use. The default network password is "HomePlug"

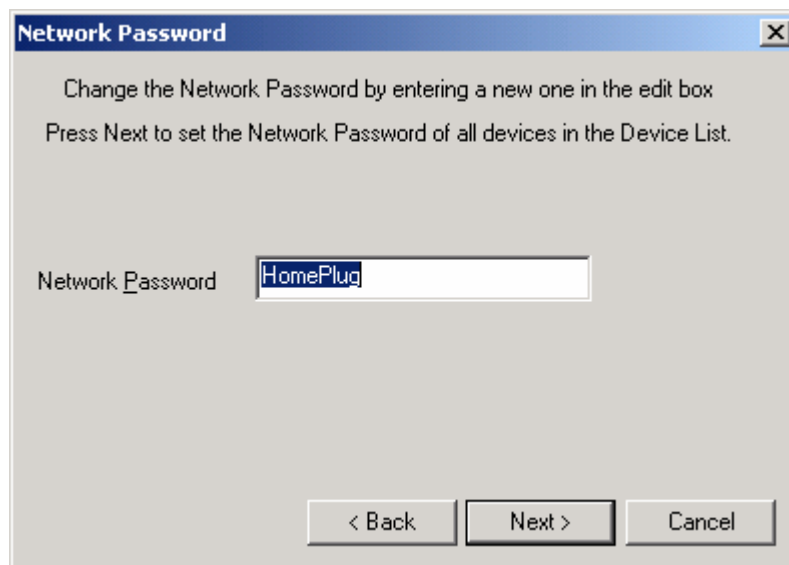

Note: It is highly recommended that you change this password from the default setting.

3. This wizard will configure Network Passwords for the local adapter, as well as the remote adapters in your Powerline network.

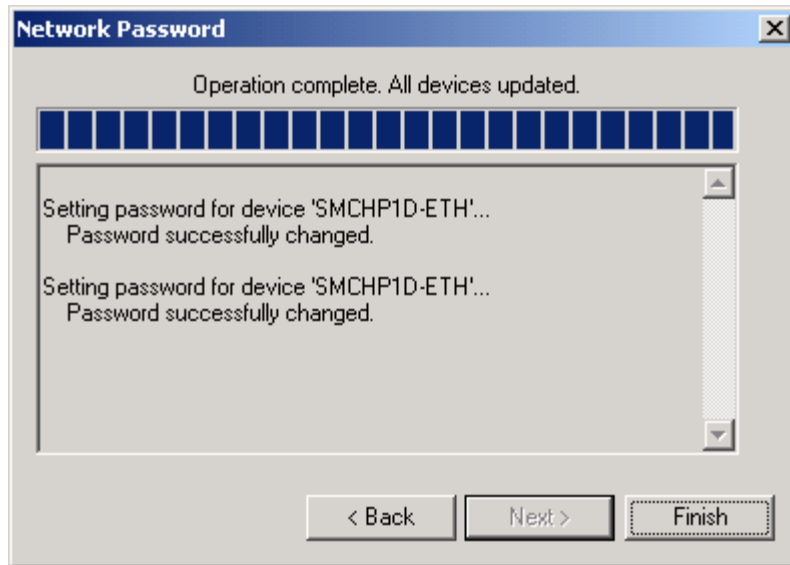


Note: You can only set passwords for remote Powerline devices if you have the Device Password (DEK) configured in the SMC EZ Configuration Utility. For information on how to do this, please refer to the previous section.

4. When the wizard has completed, click the [Finish] button to return to the EZ Configuration Utility.


CHAPTER 9 | Running the Diagnostic Wizard

The SMC EZ Configuration Utility has a built-in diagnostic tool to help you trouble shoot your Powerline network. To access this tool and detailed report, follow the steps outlined below:


1. After you click the [Diagnostics] button on the default utility page, the Powerline Diagnostics Wizard will launch. To start the wizard, click the [Next] button.

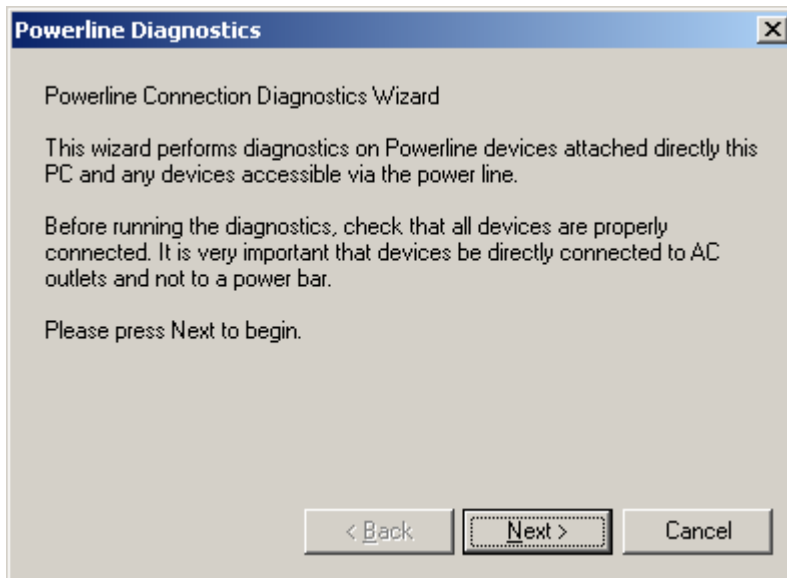


2. This utility will scan your whole Powerline network

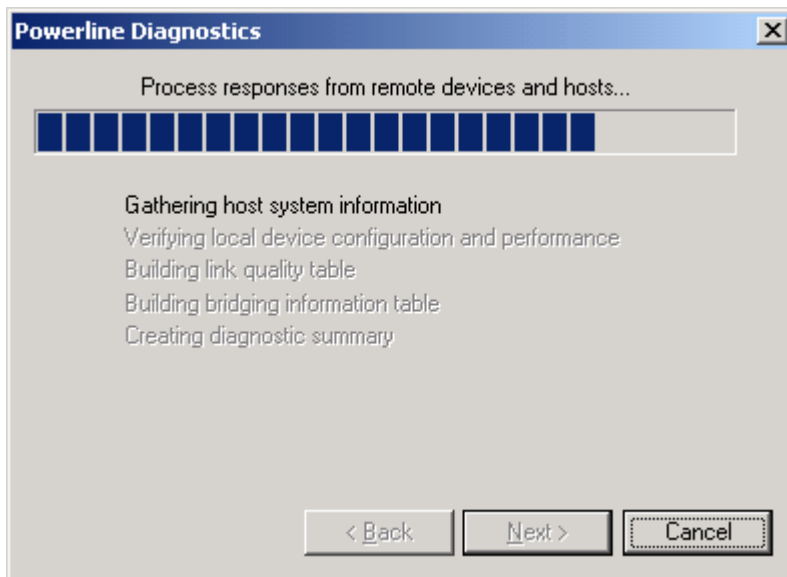

3. When the scan has completed, click the [Next] button to view the report summary.

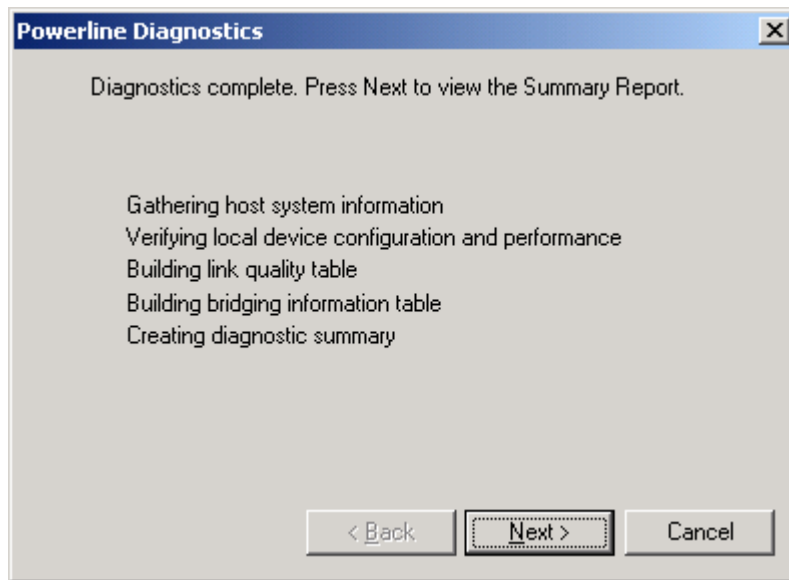

4. The report summary will tell you in there is anything wrong with your Powerline network. To access a complete report click the [Detail Report...] button.

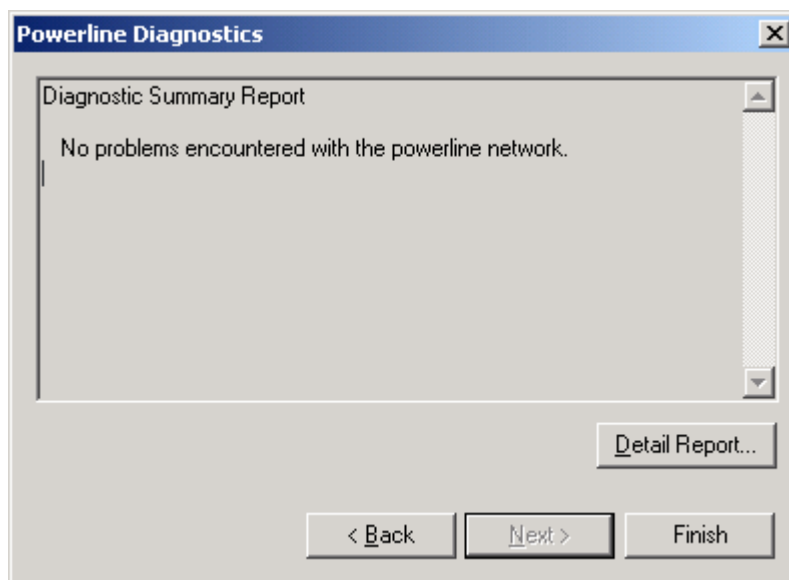

If you don't want to review the details, click the [Finish] button to return to the main utility screen.

CHAPTER 10 | Understand the Diagnostic Report

The SMC Diagnostic report is exported to a text file called [DiagnosticDetails.txt]. You can use this report to review the details of your Powerline network and get help resolving connectivity issues.

```
Thu Dec 18 21:12:01 2003

SMC EZ Configuration Utility 1.0 Report

>>> Host Information
App Name   : ConnectMan.exe
App Version: V1.05.02.00
Host Name  : xxxxxxxxxx
OS Platform: windows 2000 v5.0 Build 2195
Library Path : C:\Program Files\SMC\HomePlug\CSTDI.dll
Library Version: V5.03.16.5401
Driver Path  : C:\Program Files\SMC\HomePlug\CSTDIPD5.SYS
Driver Version : V5.03.16.54
Image Path   : \??\C:\PROGRA~1\SMC\HomePlug\CSTDIPD5.SYS

>>> Host Network Connections
Name      Status      Adapter Address      IP Address      Subnet Mask
-----
SMCL255TX Connected  00-04-E2-64-C1-1E  192.168.2.103   255.255.255.0

>>> Powerline devices
Name      Device Address      Interface      Status      Manufacturer      Product
-----
SMCHP1D-ETH  00-90-47-05-F1-79  Local Ethernet Connected    SMC               HP1D-ETH
SMCHP1D-ETH  00-90-47-05-ED-91  Remote        Connected    SMC               HP1D-ETH

>>> Network Key Mismatch Test: Passed (no key mismatch detected).

>>> Local Device 'SMCHP1D-ETH' Configuration
Network Connection: SMCL255TX
Interface Type      : Local Ethernet
Firmware Version    : CS110X MAC-1-1-1-4-0FFC-20030507-XXRC4
HomePlug MAC/PHY    : CS110200
Loopback Rate       : 1610.0 fps (OK)

>>> Link Quality Summary Table
Source Device      Destination Device      PHY Rate (Mbps)
-----
SMCHP1D-ETH        SMCHP1D-ETH            13.4
SMCHP1D-ETH        SMCHP1D-ETH            11.2

>>> Bridge Information Summary Table
Device Name      Device Address      Bridged Address      IP Address
-----
SMCHP1D-ETH      00-90-47-05-F1-79  00-30-1B-11-34-86    192.168.2.101
                  00-20-E0-88-DB-AA    UNKNOWN
                  00-04-E2-64-C1-1E    192.168.2.103 (user)
                  00-70-46-00-00-01    192.168.2.1
                  00-07-95-D8-A7-AA    UNKNOWN
SMCHP1D-ETH      00-90-47-05-ED-91  None                 UNKNOWN

-----
Diagnostic Summary Report
    no problems encountered with the powerline network.
```

This report has eight sections, which are listed below:

- Host Information
- Host Network Connections
- Powerline Devices
- Network Key Mismatch Test
- Local Device Configuration
- Link Quality Summary Table
- Bridge Information Summary Table
- Diagnostic Summary Report

Host Information

This section provides information about SMC EZ Configuration Utility and the PC you are running the utility on.

>>> Host Information

```
App Name      : ConnectMan.exe
App Version:  v1.05.02.00
Host Name     : xxxxxxxxxx
OS Platform:  windows 2000 v5.0 Build 2195
Library Path  : C:\Program Files\SMC\HomePlug\CSTDI.dll
Library Version: v5.03.16.5401
Driver Path   : C:\Program Files\SMC\HomePlug\CSTDIPD5.SYS
Driver Version : v5.03.16.54
Image Path    : \??\C:\PROGRA~1\SMC\HomePlug\CSTDIPD5.SYS
```

Host Network Connections

This section will outline the model name, if you are connected, the MAC Address, IP Address, and Subnet Mask for the Network Adapter installed on your PC.

>>> Host Network Connections

Name	Status	Adapter Address	IP Address	Subnet Mask
SMC1255TX	Connected	00-04-E2-64-C1-1E	192.168.2.103	255.255.255.0

Powerline Devices

This section lists out the Powerline devices on your network. In this section on the diagnostic report you will get the Device Name, Device Address (MAC Address), Interface, Status, Manufacture, and Product (Model) of your Powerline device.

This section is useful to check the status of all your Powerline devices to insure they are connected and operating correctly.

>>> Powerline devices

Name	Device Address	Interface	Status	Manufacturer	Product
SMCHP1D-ETH	00-90-47-05-F1-79	Local Ethernet	Connected	SMC	HP1D-ETH
SMCHP1D-ETH	00-90-47-05-ED-91	Remote	Connected	SMC	HP1D-ETH

Network Key Mismatch Test

This section will display the results of the Network Key test. This test will check to confirm if each Powerline device on network has the same encryption key.

Positive Results - Network is configured correctly.

>>> Network Key Mismatch Test: Passed (no key mismatch detected).

Negative Results - Power network is not configured correctly.

Please refer to the summary section at the bottom of the Diagnostic Report to see which device has the wrong password.

>>> Network Key Mismatch Test: Fail. (multiple network keys detected).

Local Device '[Model]' Configuration

This section will outline the hardware information about the local Powerline Device. The local Powerline device is typically the one connected directly to the PC the utility is used on. However, if you have a Powerline device connected to one of the LAN ports on your router, and the PC is connected to the Router via a wired or wireless connection, it will show the Powerline device connected to the Router as your local device.

>>> Local Device 'SMCHP1D-ETH' Configuration

```
Network Connection: SMC1255TX
Interface Type      : Local Ethernet
Firmware Version    : CS110X MAC-1-1-1-4-0FFC-20030507-XXRC4
HomePlug MAC/PHY    : CS110200
Loopback Rate       : 1610.0 fps (OK)
```

Link Quality Summary Table

In this section it the link quality for each Powerline device on your network is listed. To improve your PHY Rate, plug the Powerline adapter into another power outlet in your house.

>>> Link Quality summary Table

Source Device	Destination Device	PHY Rate (Mbps)
SMCHP1D-ETH	SMCHP1D-ETH	13.4
SMCHP1D-ETH	SMCHP1D-ETH	11.2

Bridge Information Summary Table

In this section it you will get a complete summary of your Powerline network. The reason the first Powerline Device shown below has 5 Bridged Addresses listed is because this Powerline device is connected to the LAN port of a Barricade Router.

>>> Bridge Information Summary Table

Device Name	Device Address	Bridged Address	IP Address
SMCHP1D-ETH	00-90-47-05-F1-79	00-30-1B-11-34-86	192.168.2.101
		00-20-E0-88-DB-AA	UNKNOWN
		00-04-E2-64-C1-1E	192.168.2.103 (user)
		00-70-46-00-00-01	192.168.2.1
		00-07-95-D8-A7-AA	UNKNOWN
SMCHP1D-ETH	00-90-47-05-ED-91	None	UNKNOWN

Diagnostic Summary Report

This section of the diagnostic report will outline any steps required to fix a connectivity issue. For example, if you fail the **Network Key Mismatch Test**, this section will provide an explanation of the issue, display which device has the wrong password, and provide a method to resolve this issue.

Diagnostic Summary Report

>>> Multiple keys detected.

At least one device connected to the powerline is using a Network Password that is different than the Network Password used by the local adapter.

Use the Network Manager 'Add Device' function to set the Network Password of all new devices connected to the powerline.

>>> Device 'SMCHP1D-ETH' is using a different Network Password.

Use the Network Manager 'Network Password' function to set the correct Network Password for this device.

Appendix A - Product Specification

Below is an outline of the Technical Specifications for the EZ Connect Powerline to USB Desktop Adapter (SMCHP1D-USB)

Standards:

HomePlug v1.01 compatible
USB 1.1

Interface:

USB 1.1
Electrical plug (Powerline)

LEDs:

Power (PWR)
HomePlug LINK/ACT (HP)

Power Input:

100-240VAC @ 50-60Hz (internal)
0.15A

Security:

56-bit Data Encryption (DES) with
Dynamic Key Management

Protocols:

Forward Error Correction (FEC)
Automatic Channel Adaptation

Software:

Device Detect/Diagnostic
DEK Password Setup for Local and Remote
Device
Supports Windows 98, Me, 2000, XP
Mac OS 9.x and OS X 10.1.x

Driver:

Supports Windows 98SE, Me, 2000, XP

Operating Temperature:

32°F to 104°F (0°C to 40°C)

Operating Humidity:

10% to 90% Non-Condensing

Frequency:

4.3 MHZ - 20.9 MHZ

Modulation:

OFDM Symbol Modulation,

Modulation Schemes:

DQPSK, DBPSK, ROBO Carrier Modulation

Dimensions:

3.05 x 4.53 x .98 in (77.5 x 115 x 25mm)

Weight:

4.59oz (130g)

Certifications:

FCC Part 15 Class B
CE
U/L Certified

Warranty:

Limited Lifetime

Appendix B - Compliances

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or device
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IMPORTANT NOTE: FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters (8 inches) between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Appendix C - Technical Support

PHONE

From U.S.A. and Canada (24 hours a day, 7 days a week)

- (800) SMC-4-YOU
- (949) 679-8000
- Fax: (949) 679-1481

From Europe (8:00 AM - 5:30 PM UK Time)

- 44 (0) 118 974 8700
- Fax: 44 (0) 118 974 8701

INTERNET

E-mail addresses:

- techsupport@smc.com
- european.techsupport@smc-europe.com

Product Updates:

- <http://www.smc.com/>

World Wide Web:

- <http://www.smc.com/>
- <http://www.smc-europe.com/>

U.S.A. and Canada:	(800) SMC-4-YOU	Fax (949) 679-1481
Spain:	34-93-477-4935	Fax 34-93-477-3774
UK:	44 (0) 118 974 8700	Fax 44 (0) 118 974 8701
France:	33 (0) 41 38 32 32	Fax 33 (0) 41 38 01 58
Italy:	39 02 739 12 33	Fax 39 02 739 14 17
Benelux:	31 33 455 72 88	Fax 31 33 455 73 30
Central Europe:	49 (0) 89 92861-0	Fax 49 (0) 89 92861-230
Switzerland:	41 (0) 1 9409971	Fax 41 (0) 1 9409972
Nordic:	46 (0) 868 70700	Fax 46 (0) 887 62 62
Northern Europe:	44 (0) 118 974 8700	Fax 44 (0) 118 974 8701
Eastern Europe:	34 -93-477-4920	Fax 34 93 477 3774
Sub Saharan Africa:	27-11 314 1133	Fax 27-11 314 9133
North Africa:	34 93 477 4920	Fax 34 93 477 3774
Russia:	7 (095) 290 29 96	Fax 7 (095) 290 29 96
PRC:	86-10-6235-4958	Fax 86-10-6235-4962
Taiwan:	886-2-2659-9669	Fax 886-2-2659-9666
Asia Pacific:	(65) 238 6556	Fax (65) 238 6466
Korea:	82-2-553-0860	Fax 82-2-553-7202
Japan:	81-3-5645-5715	Fax 81-3-5645-5716
Australia:	61-2-8875-7887	Fax 61-2-8875-7777
India:	91-22-8204437	Fax 91-22-8204443

If you are looking for other contact information, please visit www.smc.com

